



CT-4030

Classic Access Front with Wire Side Panels

For 24|74 Calf-Tel Hutch

Assembly Instructions for Installation



CT-4030 Calf-Tel Classic Access Front with Wire Side Panels Bill of Material:

Item	Item Number	Description	Qty
1	CT-4031A	Classic Front Frame w/Gate	1
2	CT-4033	Classic Top Lock	1
3	CT-HDWE-054	Top Lock Hardware Kit	1
4	CT-4034	Classic Wire Fence, Side Panel	2
5	CT-4035	Classic Wire Fence, Side Panel Pin	2

Tools Needed:





1. ½ in Socket & Ratchet
2. ½ in Open End Wrench




Installation Instructions:

Step 1: Connect Classic Access Front Frame to Classic Wire Fence Side Panels: Place fence side panels on each end of Access Front Frame.


- a. Starting with one fence panel, align gate and fence to form a straight line.
- b. Slide fence panel into front frame hooks.
- c. Maneuver fence panel towards hutch to secure into place.

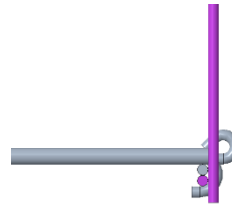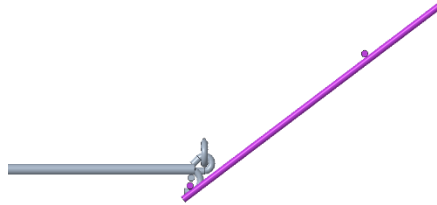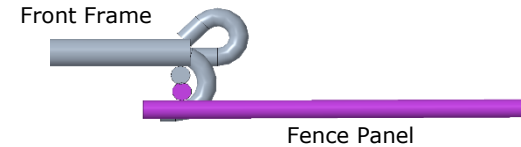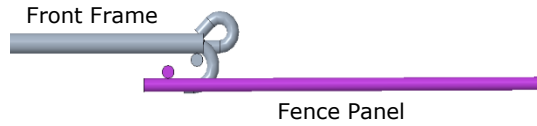

Step 2: Secure Fence Panels: Using the provided side panel pin (2), guide pin through fence and frame connectors.

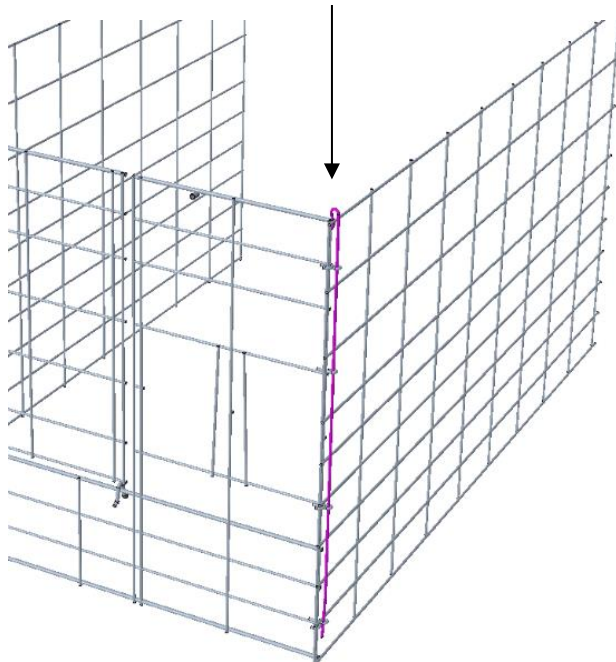


Step 3: Hook top of pin over top of fence.

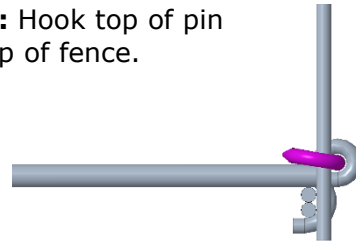


Step 4: Repeat step on other corner of fence/gate.



Step 5: Install Top Lock: Using the Top Lock and the Hardware Kit, bolt top lock to front frame. Top lock should sit snug over the fence frame and gate opening.

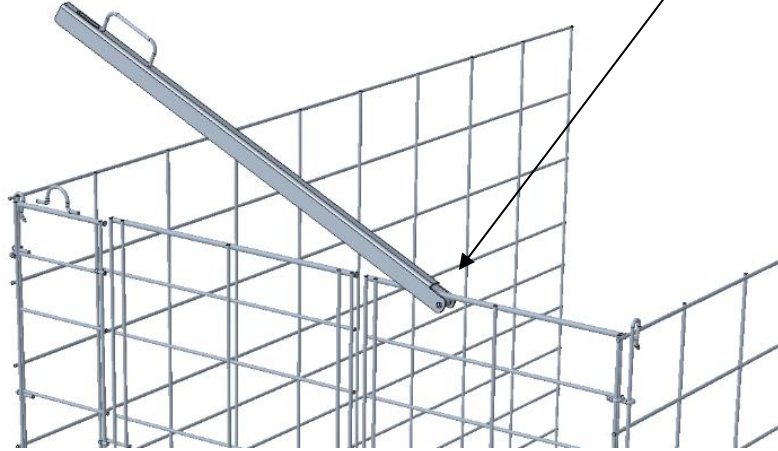


Step 6: Secure Top Lock Over Frame & Gate: Once Top Lock is attached, secure over frame & gate. Easily lift up to open gate and push down to lock gate.

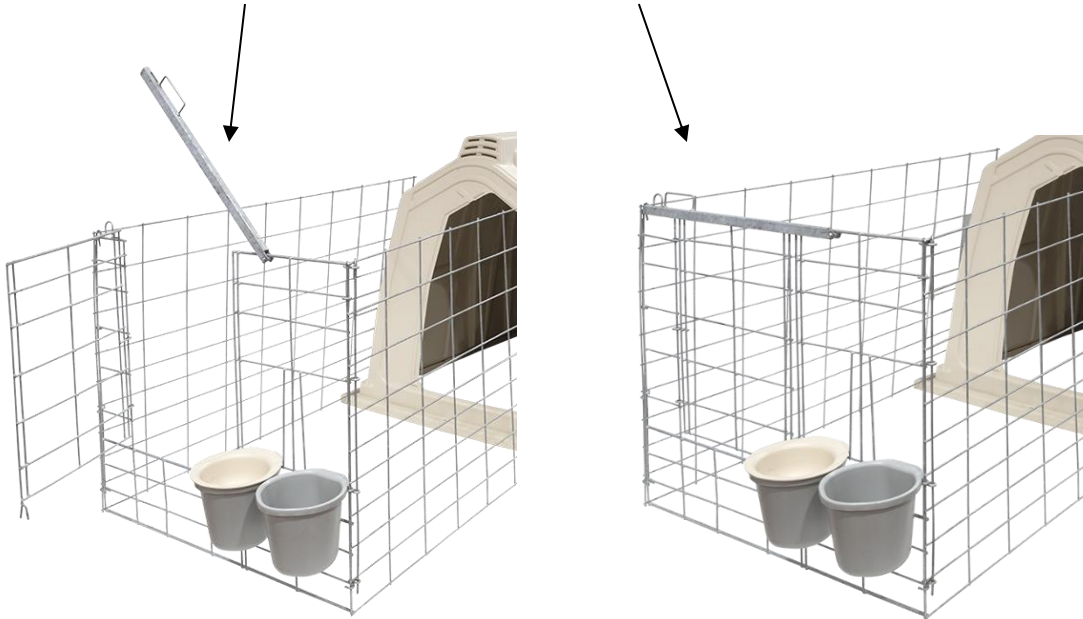



L-rod Assembly Instructions for Installation

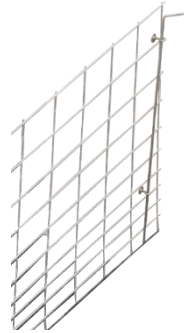

Calf-Tel L-rod Bill of Material:

Item	Item Number	Description	Qty
1	CH-3332A-2	Fence L-rod	2
2	CT-9100-1	Fence Attachment Hardware	1

Tools Needed:


1. 1/2 in Socket & Ratchet

Installation Instructions:


Step 1: Thread on a nut, lock washer and then the fender washer. Insert eyebolt into hole in side of hutch.



Step 2: Large fender washer should be installed against the hutch on the outside. Next, add a lock washer. A nut should be installed on top of the lock washer. This helps adjust the eyebolt out to the correct distance (approx. 1.5" to the center of the eye on the top and 1.75" to the center of the eye on the bottom).

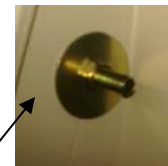

Step 3: Install the large fender washer against the hutch on the inside of the hutch. Then, add a lock washer and secure in place with a nut. This helps tighten the eyebolt in place once the desired location is established on the outside.

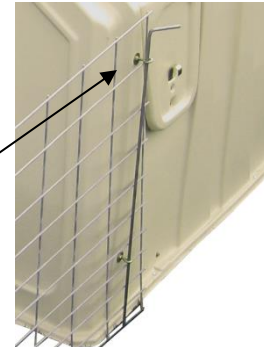

Step 4: Fence is locked into position when the upper eyebolt and the lower eyebolt are within one section on the fence. This keeps the fence from moving forward and backward.