



# CT-3215 Hutch Mount Double Pail Holder Kit Assembly Instructions for Installation



### Calf-Tel Hutch Mount Double Pail Holder Kit Bill of Material:


Item	Item Number	Description	Qty
1	CTPHD	Double Inside Pail Holder	1
2	CH-3214	Pail Holder Stem	1
3	CT-9500	Pail Holder Assembly Hardware	1

#### Tools Needed:

1. Flat Head Screw Driver
2. 7/16" Deep Well Socket
3. Ratchet

#### Inside View

#### Outside View

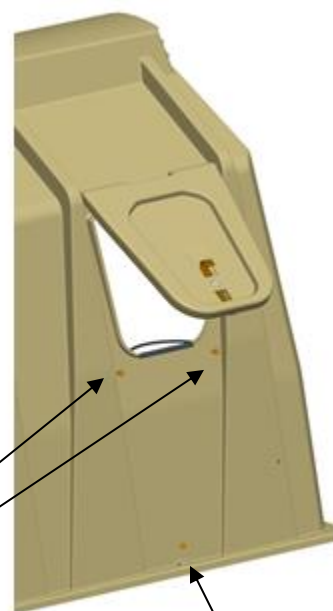

#### Installation Instructions:

##### Step 1: Attach Pail Holder Support Stem to Double Pail Holder:

Secure support stem to pail holder with 1 washer and 1 nut.

##### Step 2: Secure Double Pail Holder to Hutch:

Slide pail holder over lip of side feeding opening and push studs through holes in the hutch. Tighten nuts and washers onto studs on outside of hutch.

##### Step 3: Fasten Pail Holder Stem to Hutch:

Install stem under hutch lip using 1-1/4" screw. Tighten nut and washer on outside of hutch.