



CT-10015AF


Chute Bottle Holder Fence Mount Kit

Assembly Instructions for Installation




Calf-Tel Chute Bottle Holder Bill of Material:

Item	Item Number	Description	Qty
1	CT-10015	Chute Bottle Holder	1
2	CT-10033	Chute Bottle Holder Fence Wire Support	1
3	CT-HDWE-036	Hardware Required for Assembly	1
		5/16-18 x 1 Hex Flanged Cap Screw	1
		5/16-18 Nylon Lock Nut	1

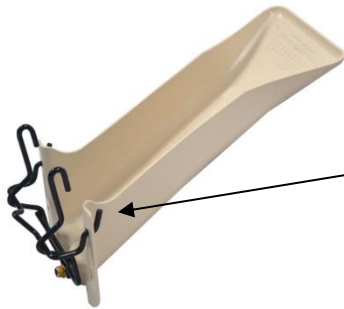

Installation Instructions:

Step 1: Secure Hardware to Chute Bottle Holder: Position curved wire support through sides of chute. Align bottom loop of wire support with hole in chute. Using hex flanged cap screw and nylon lock nut, secure chute to wire support.

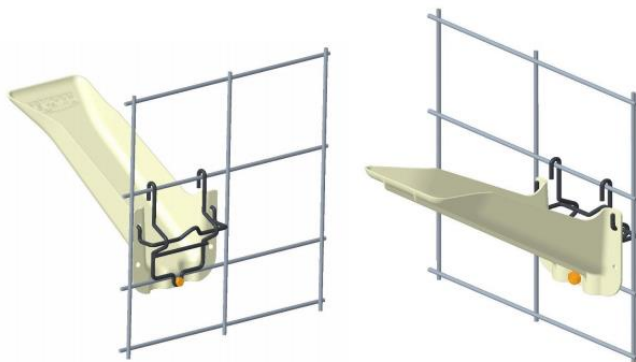

Step 2: Assembly Chute to Fence: Hook the bottle holder fence support wire to the inside of the fence.




CT-10015AH Hutch Mount Chute Bottle Holder Assembly Instructions for Installation

Calf-Tel Chute Bottle Holder Bill of Material:

Item	Item Number	Description	Qty
1	CT-10015	Chute Bottle Holder	1
2	CH-3232	Face plate chute bottle holder	1
3	CT-HDWE-009	Screw 5/16-18 x 1.0 Hex Cap	5
4	CT-HDWE-015	Nut 5/16-18 Top Lock Hex	5

Installation Instructions:

Step 1: Attach bottle holder: Using the supplied hardware, attach the CT-10015 Chute Bottle Holder and CH-3228-1 Bottle Holder Face plate to the hutch.

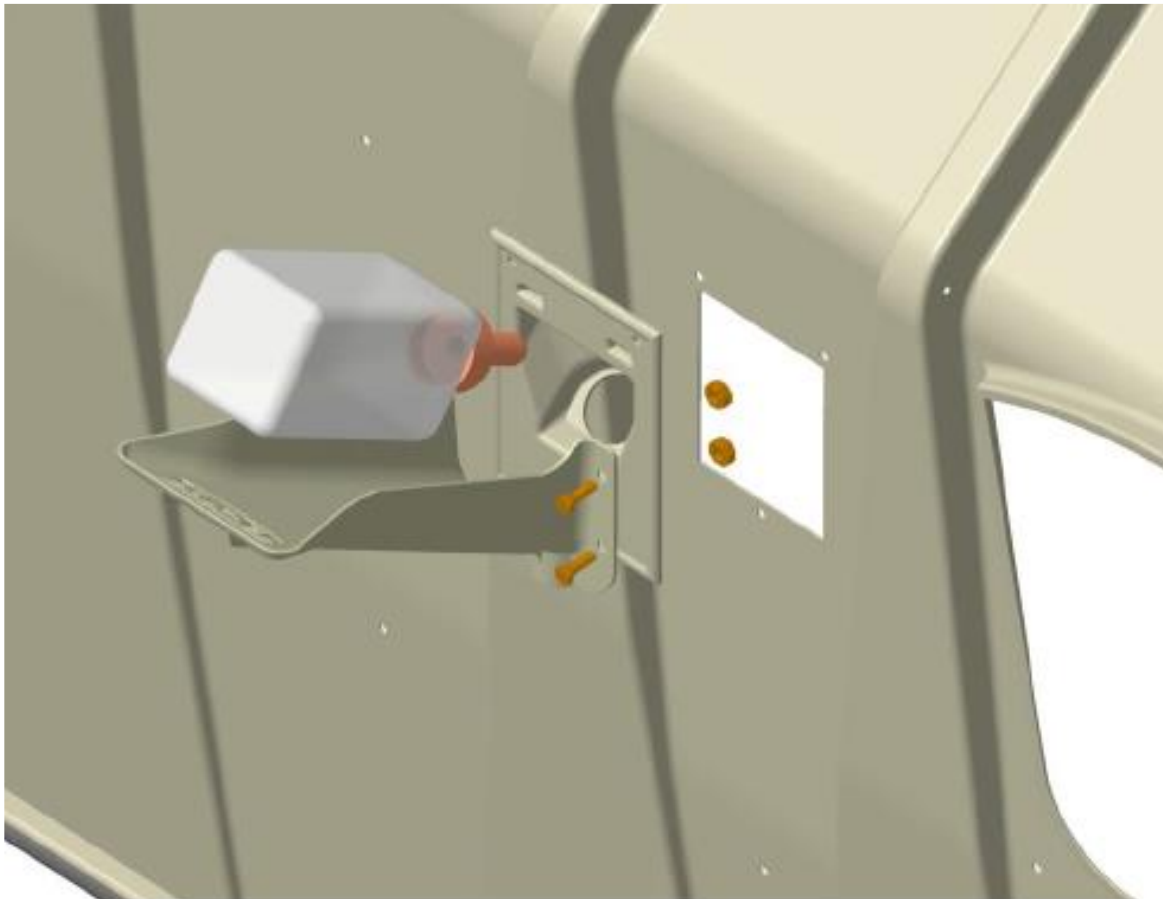



CT-10015AP Pen Mount Chute Bottle Holder Assembly Instructions for Installation

Calf-Tel Chute Bottle Holder Bill of Material:

Item	Item Number	Description	Qty
1	CT-10015	Chute Bottle Holder	1
2	CT-HDWE-009	Screw washerless 5/16-18 x 1.0 hex cap	3
3	CT-HDWE-015	Nut 5/16-18 washerless nylon lock nut	3

Installation Instructions:

Step 1: Attach bottle holder: Using the supplied hardware, attach the CT-10015 Chute Bottle Holder to the pen front. **Note: Assemble bolts on the inside with the nut on the outside. This keeps the calf from being harmed by the bolt stud.**



Bottle w/Nipple