Revised October 2021



CT-7010K Lower Hutch Vent Kit

Fits 35|85

Assembly Instructions for Cut & Installation



Calf-Tel Lower Hutch Vent Kit Bill of Material:

| Item | Item Number | Description | Qty |
|------|-------------|---------------------|-----|
| 1 | CT-7010 | Hutch Vent | 2 |
| 2 | CT-HDWE-011 | Hutch Vent Hardware | 1 |

Tools Needed:

Router, Roto-zip or Jig Saw
½ in (12.7 mm) Deep Socket with Ratchet


Installation Instructions:

Step 1: Drill Center Vent Hole: Refer to the dimensions on page 1 and drill center hole with a 3/8 drill bit.

Step 2: Trace Vent Openings: Using the template provided on page 3, align the template with holes. Outline the template on the back of plastic hutch.

Step 3: **Cut Vent Openings:** Use router, roto-zip or jig saw to cut two openings in back of hutch.

Step 4: Install Vent Covers: Place vent covers over openings. Insert supplied bolt from the inside and tighten with nut on outside of hutch. Tighten using ratchet.

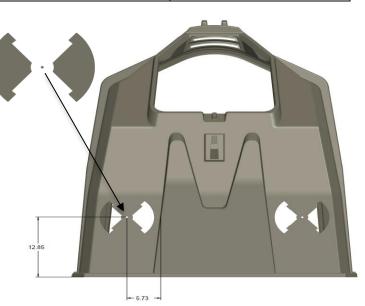

Revised October 2021



CTH-7010K Lower Hutch Vent Kit

Fits 24|74 Assembly Instructions for Cut & Installation



Calf-Tel Lower Hutch Vent Kit Bill of Material:

| Item | Item Number | Description | Qty |
|------|-------------|---------------------|-----|
| 1 | CT-7010 | Hutch Vent | 3 |
| 2 | CT-HDWE-057 | Hutch Vent Hardware | 1 |

Tools Needed:

- 1. Router, Roto-zip or Jig Saw
- 2. 1/2 in (12.7 mm) Deep Socket with Ratchet
- 3. 1/2 in (12.7 mm) Wrench


Installation Instructions:

Step 1: Drill Center Vent Hole: Refer to the dimensions on page 1 and drill center hole with a 3/8 drill bit.

Step 2: Trace Vent Openings: Using the template provided on page 3, align the template with holes. Outline the template on the back of plastic hutch.

Step 3: **Cut Vent Openings:** Use router, roto-zip or jig saw to cut two openings in back of hutch.


Step 4: Install Vent Covers: Place vent covers over openings. Insert supplied bolt from the inside and tighten with nut on

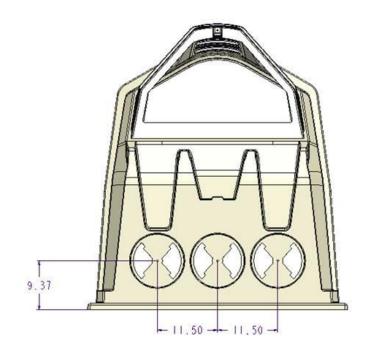

Hampel, W194 N11551 McCormick Drive, Germantown, WI 53022 Phone: 262-255-4540 Fax:262-255-9731 Revised October 2021





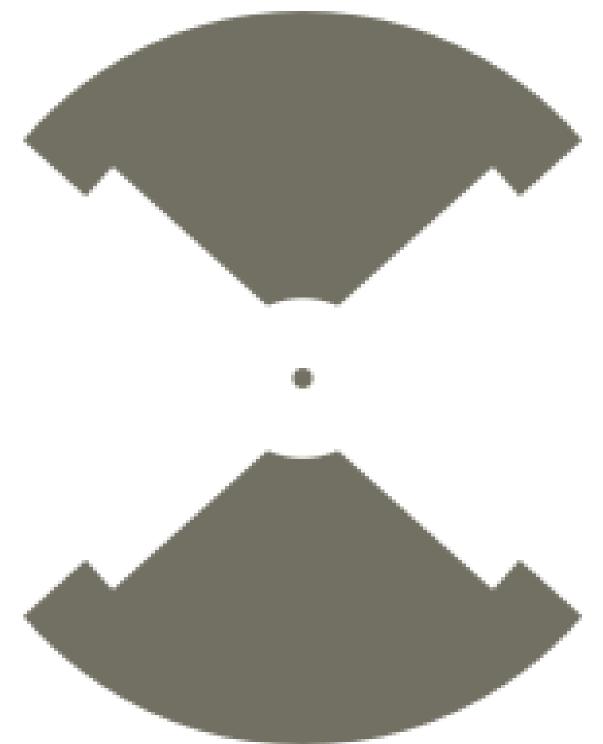

Hampel, W194 N11551 McCormick Drive, Germantown, WI 53022 Phone: 262-255-4540 Fax:262-255-9731