




CTG-2005

TwinMax Lifting Device Assembly Instructions

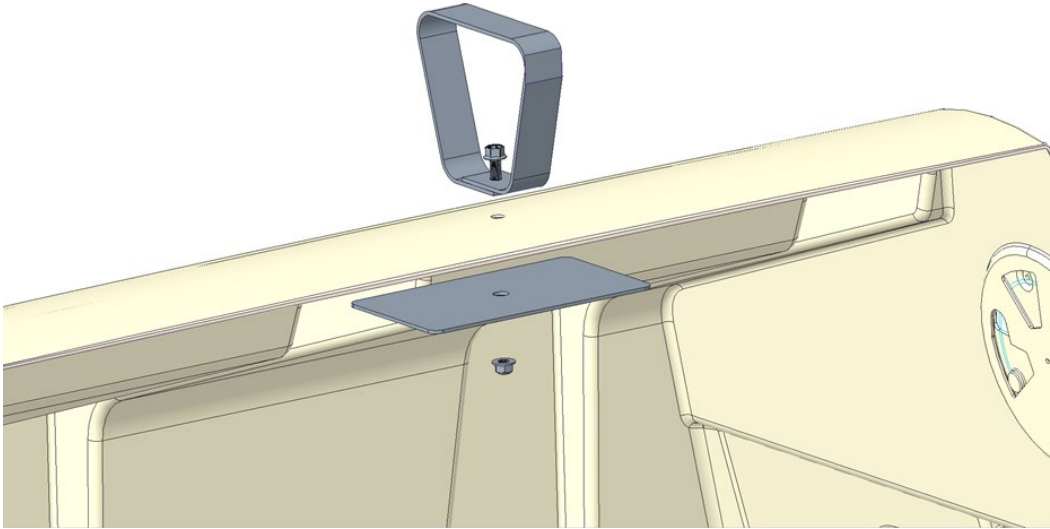

Bill of Material for the CTG-2005:

Item	Hampel Item Number	Description	Qty
1	CTG-2005A	Flat Plate	1
2	CTG-1011B	Upper Loop	1
3	CTH-HDWE-025	½-13 x 1.5" Hex Bolt	1
4	CTH-HDWE-024	½-13 Hex Nut	1

Tools Needed:

1. 3/4" Socket wrench and ratchet
2. Helper

Step 1: Assembling the TwinMax Lifting Device

- A. Locate the dimple on top of the unit, and using a 1/2" dia. drill, drill the mounting hole.
- B. Next - Place the Upper Loop (CTG-1011B) on top of the mounting surface, with the hole in the base of the loop aligned to the hole in the mounting surface and the plate hole below it.
- C. Next - Insert the Bolt (CTH-HDWE-025) from the top, down through the Upper Loop and the mounting surface.
- D. Next - Position the Flat Plate (CTG-2005A) against the underside of the mounting surface, with the plate hole aligned with the bolt. (as shown in the picture above)
- E. Next - From the underside, thread the Nut (CTH-HDWE-024) onto the Bolt and tighten until the Upper Loop and Flat Plate are held firmly against the mounting surface.